

LIMIT DEVICE SETTING.

G

1 5 sec. SET


2 DOWN CLOSING SET

3 1 sec. OK SET

4 UP DOWN OPENING SET

5 1 sec. OK SET

OK!

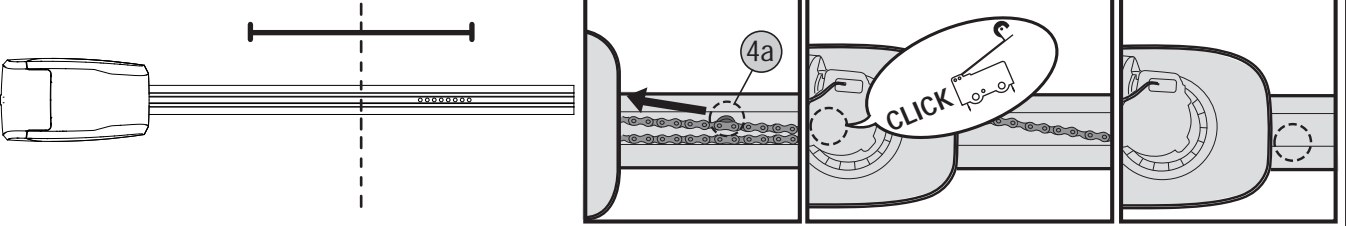

ERROR!

5 sec. SET

ERROR!

OPENING / CLOSING TORQUE AUTOSETTING.

H

1 5 sec. SET

2 SET

3 SET

4 SET

SWC

AUTO OPEN

SWO

AUTO CLOSE

